


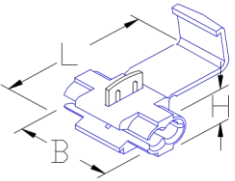


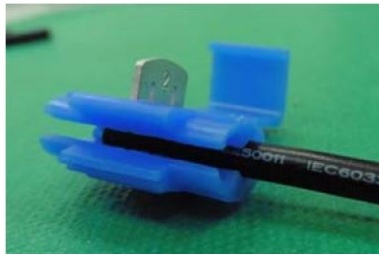
# Hillsdale Terminal

## Product information: STRIPPING QUICK SPLICE

ITEM NO.	WIRE RANGE AWG / mm <sup>2</sup>	DIMENSIONS (mm)			INSULATED COLOR	IMAGE
		B	H	L		
20510UL	22~18 AWG 0.5~1.0 mm <sup>2</sup>	20.0	8.0	26.8	RED	 
20500J	18~14 AWG 1.5~2.5 mm <sup>2</sup>				BLUE	
20512UL					WHITE	
20511UL	12~10 AWG 4~6 mm <sup>2</sup>	11.0	35.0	YELLOW		

## Installation Instruction



1. Conductor shall not be striped before crimping.
2. Use Stranded copper wire only.
3. Install the intended use wire in displacement terminal and hold in place.



4. Before start crimping. Close tool carefully until jaw grip the terminal without distortion.
5. Crimp connector fully 1 time by the follow demonstration and check the housing shall not be broken.



6. Compress the insulation cover tightly.

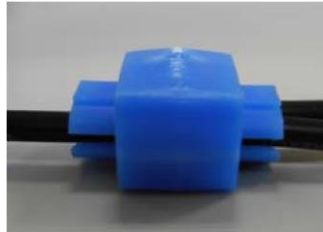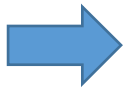

7. Use the specific crimp tool as demonstration above.

